



Figure 3 – JERIHO R / RS / RB – General View (R Model)

## **Safety Features**

- The pistol has a firing pin block mechanism, which prevents involuntary firing. The block is released only when the trigger is fully pulled.
- Chamber Indicator (optional): when the chamber is loaded with a round the indicator protrudes out of the slide.  
When the chamber is unloaded the indicator is aligned with the slide.  
The indicator can be both visually and physically identified either by sight or feel.
- In the JERICO F models, the safety lever is located on the frame. Safety mechanism blocks the sear, which blocks the movement of the trigger.
- Safety hook on the hammer: prevents the hammer hitting the firing pin when the cocked weapon is accidentally dropped.
- In the JERICO R models, the ambidextrous safety lever is located on the slide. The safety lever also serves as a de-cocking mechanism. Rotating it to the SAFE position pushes the firing pin into the slide and releases the hammer, in a manner that does not allow firing.  
In the JERICO R models, in the SAFE position, the trigger is neutralized.