

# Tavor® SAR Removal and Installation of the Barrel Pivot Lock

- ▶ **Please follow the following steps in your Tavor® SAR manual before you remove your barrel pivot lock:**
- ▶ Section 15.1 Primary Disassembly/Reassembly.
- ▶ Section 15.5 Removal/Installation of Flattop Rail for removal of the flattop rail.
- ▶ Section 15.8 Removal/Installation of Cocking Group for removal of the cocking group.
- ▶ Section 15.10 Removal/Installation of Barrel Group to remove the barrel.
- ▶ **Warning: Removing your barrel without completing Sections 15.5 - 15.8 first will damage your barrel.**

# REMOVING THE BARREL PIVOT LOCK

- ▶ Remove barrel pivot lock by rotating the locking pivot blocking plate so it is pointing to the rear of rifle.



- ▶ Push barrel pivot lock out of the left side of rifle. Making sure that the roll pins on the barrel pivot lock line up with the slots on the body. If they are not lined up correctly they can be sheared off.



# INSERTING BARREL LOCK

- ▶ Insert barrel lock assembly from left side of rifle. Make sure roll pins on barrel lock align with slots on body, and push barrel lock into position.



- ▶ Once barrel lock is all the way in use barrel wrench to rotate the barrel lock to the open position. Do not force the barrel wrench! if the barrel lock does not rotate with ease it is not in the correct position.